

Calgary




Finn scooter **Golfer** **ride guide**



How to operate your Finn Scooter

Step 1: Familiarize yourself with the controls

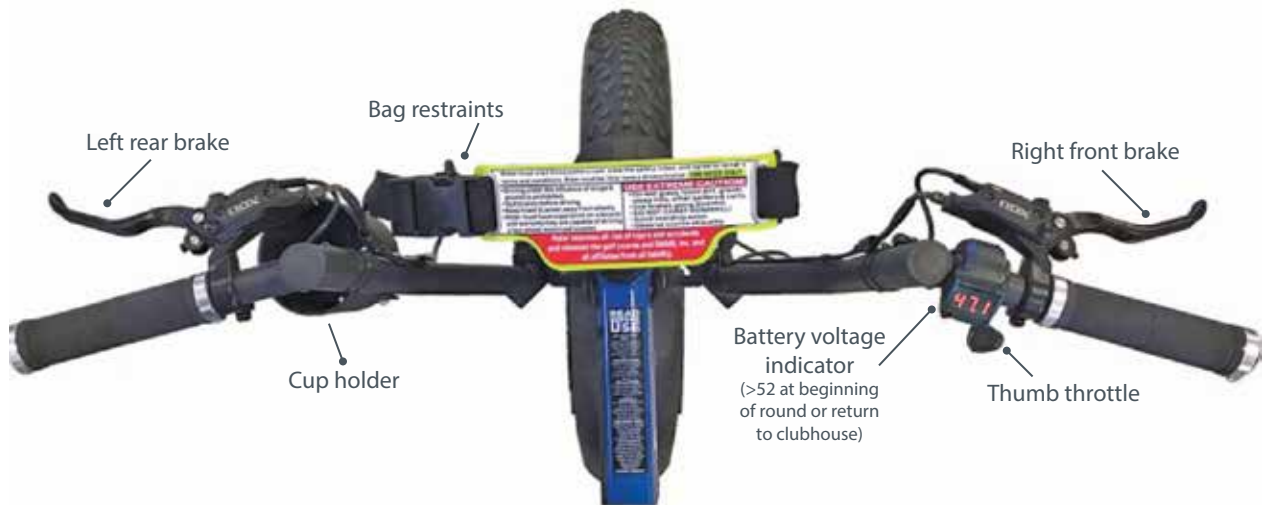

Step 2: Load your bag

1. Place the bottom of your golf bag in the lower bag support below the seat.
2. Lower the top of the golf bag into the upper bag support.
3. Secure the golf bag by locking the buckle and cinching the strap.

Step 3: Safety check

- Make sure your golf bag is secure on the scooter.
- Make sure nothing is dangling that could get stuck in the front spokes. Secure anything that is dangling, like a towel or strap, in a pocket.
- Put down foot pads for stability while riding.

Step 4: Turn on ignition and have fun

The keyhole is located below the seat.





Rules for riding on the course

- You must be over 18 years of age with a valid driver's license.
- Stay on pathways whenever possible.
- Keep off tee boxes and greens (at least 20 feet from edge).
- Do not operate under the influence of alcohol or drugs.
- Remember to use the kickstand when you get off.

Golfers may be held responsible for personal injury or damage to equipment or property.

Casual golf. Serious fun.

calgary.ca/golf